

TIME CHANGE PROCEDURES

Vertical/Comdial DX-80 & DX120

PRESS FEATURE #* (pound star)
ENTER PASSWORD # 8 TIMES (#####)
PRESS SHOW, PRESS CHANGE
ENTER 081405 (FOR TIME) ENTER 0814 (FOR MONTH/DAY)
PRSS SAVE
PRESS CHANGE
ENTER TWO DIGITS FOR HOUR (REMEMBER TIME IN MILITARY TIME)
PRESS SAVE
EXIT FEATURES MENU ON/OFF

Comdial DSU & DSUII

FROM EXT 10 OR 12/110 OR 112
PRESS INTERCOM
PRESS *#01 (star pound 01)
PRESS TWO DIGITS FOR YEAR
PRESS TWO DIGITS FOR MONTH
PRESS TWO DIGITS FOR DAY
PRESS TWO DIGITS FOR HOUR (REMEMBER MILITARY TIME 1:00 PM IS 13)
PRESS TWO DIGITS FOR MINUTES
PRESS SPEAKER TO END

Vertical/Comdial DXP, DXP+, FXS, FXT & FXII,

PRESS INTERCOM
PRESS *#0*01 (star pound 0 star 01)
PRESS DIAL TWO DIGITS FOR MONTH
PRESS TWO DIGITS FOR DAY
PRESS TWO DIGITS FOR YEAR
PRESS TWO DIGITS FOR HOUR (REMEMBER MILITARY TIME 1:00 PM IS 13:00)
PRESS TWO DIGITS FOR MINUTES
PRESS # TO SAVE PRESS SPEAKER TO END

SIEMENS HiCom 150 & HiPath 3000

PRESS *95 (star 95)
PRESS 31994 CHECK
PRESS 31994 CHECK
PRESS 19 CHECK
PRESS * TO CHANGE CHECK
PRESS HHMM CHECK (REMEMBER MILITARY TIME 1:00 PM IS 13:00)
THEN HANGUP

PANASONIC TDA 50, TDA 100, TDA 200 & TDA600

FROM EXT 101 or 1st EXT IN SYSTEM
PRESS PROGRAM BUTTON
ENTER *# (star pound)
ENTER PASSWORD 1234 or 4663
PRESS NEXT
PRESS ENTER
OPTION TO CHANGE DATE IF OK PRESS NEXT IF NOT CHANGE THEN PRESS STORE THEN
NEXT
OPTION TO CHANGE TIME WHEN CHANGED PRESS STORE
LIFT RECEIVER TO EXIT